


CORDSTAND™

Made in U.S.A. by **DOSKOCIL**

470012

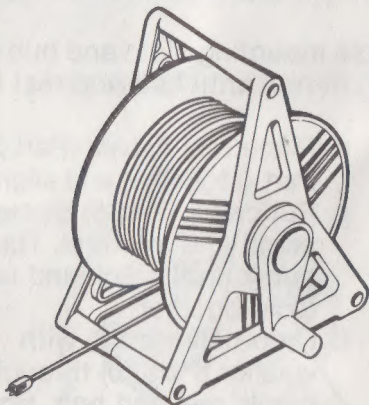

P. O. Box 1246
Arlington, Texas 76004-1246

PARTS LIST

PART NO.	QTY.	DESCRIPTION
1	1	Stand Half
2	1	Stand Half with Key Hole Mounting Slots
3	1	Reel Half
4	1	Reel Half
5	1	Crank
6	1	Hub — Separate from Plastic Tool Part 7
7	1	Plastic Tool
8	4	1/4" — 20 × 3 1/2" Long Bolt
9	4	1/4" — 20 Hex Nut
10	1	Washer
11	2	Cordclip

All plastic Cordstand parts have part numbers engraved on them for easy assembly.

ASSEMBLY STEP 1 (ILLUSTRATION 1)

- Place stand halves (Part 1 and Part 2) together.
- Insert bolts (Part 8) through stand crossmembers.
- Place a nut (Part 9) on the end of a bolt with the aid of the plastic tool (Part 7), tighten the bolt with a screwdriver. Repeat this procedure for the remaining 2 bolts.

NOTE: Separate Part 7 from Part 6.


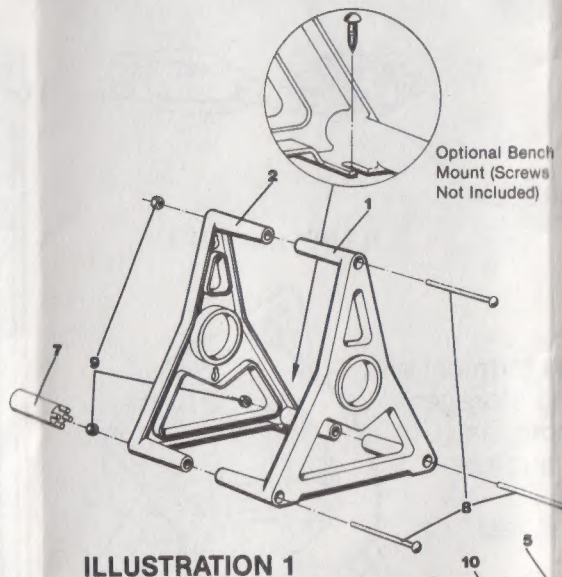


ILLUSTRATION 1

ASSEMBLY STEP 2 (ILLUSTRATION 2)


- Place hub (Part 6) through stand Part 2 (side of stand with key hole mounting slots).
- Lay stand on its side with key hole mounting slots and hub down.
- Put reel half (Part 3) over hub. Turn reel until hub and reel lock together.

ILLUSTRATION 2

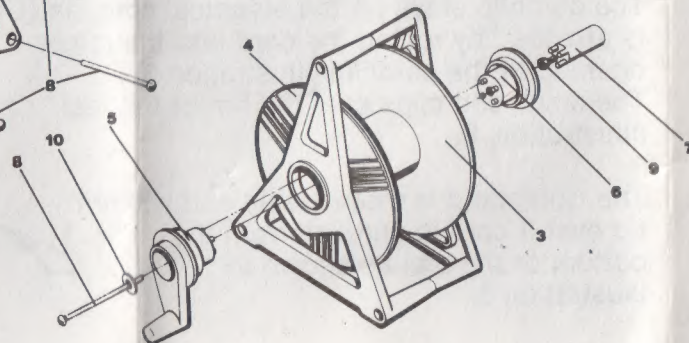

- Place reel halves (Part 3 and Part 4) together and align slots.
- Put crank (Part 5) through stand and into reel. Turn crank until crank and reel lock together.
- Drop bolt (Part 8) with washer (Part 10) through crank, reel and hub. Hold nut on end of bolt with plastic tool (Part 7) while tightening bolt with screwdriver.

**SEE REVERSE SIDE FOR
ADDITIONAL INFORMATION**

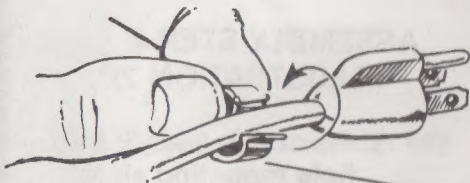

CORDCLIP

ILLUSTRATION 3



ILLUSTRATION 4

CORDCLIP

The cordclip is designed to attach the terminal end of the electrical cord to the reel during storage. The cordclip stays on the electrical cord, and is attached by rolling the cord into the larger opening of the cordclip (Illustration 3). The small end clips over the rim of the reel (Illustration 4).

The Cordstand is more stable and will not tip over if cord is unrolled from the bottom of the reel as shown in Illustration 5.

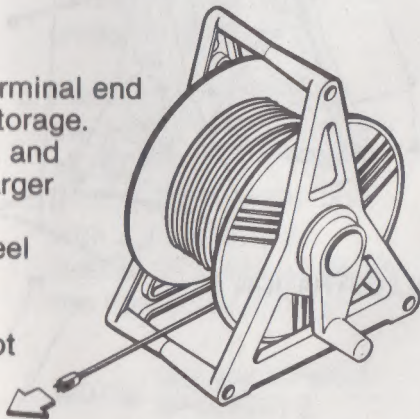


ILLUSTRATION 5

LIMITED FIVE-YEAR WARRANTY

Warranted for five years from date of retail purchase against defects in material and workmanship. Solely for the benefit of the original consumer purchaser. (Retain your dated sales receipt as proof of purchase.)

COVERED: Replacement of defective parts and labor, and product return to consumer.

NOT COVERED: Damages caused by abuse or failure to perform normal maintenance. Any other expense. This Warranty shall not apply to any defect, malfunction or failure to conform with the Warranty provisions if caused by damage (not resulting from defect or malfunction) due to unreasonable use by the Purchaser. **CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES OR INCIDENTAL EXPENSES, INCLUDING DAMAGE TO PROPERTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.**

This Warranty gives you specific legal rights which may vary from state to state.

QUALIFICATION FOR WARRANTY PERFORMANCE: Return product with proof of purchase and narrative description of the defect together with your name and address, freight prepaid, to: Dorskocil Manufacturing Company, Inc., Warranty Division, 4209 Burnett Street, Arlington, Texas 76017. This product will be repaired or replaced at Dorskocil's option and will be returned to you, postage prepaid, as soon as practicable, but in no event later than 45 days after received by Dorskocil.

REQUEST FOR ACTION WARRANTY: Please direct all requests for action on this Warranty or any other product inquiries to Dorskocil Manufacturing Company, Inc., Warranty Division, P.O. Box 1246, Arlington, Texas 76004-1246.

(Keep for your record.)